

3 Tier Kit

Contents:

A: Door (x3)	E: Back Legs (x2)	I: Leg Supports (x2)
B: Back (x3)	F: Front Legs (x2)	J: Side Mesh (x6)
C: Feet (x6)	G: Front Lip (x3)	K: Top Mesh (x3)
D: Horizontal Supports (x6)	H: Tier Supports (x4)	L: Floor Wire (x3)
		M: Bottom Tray Support (x2)

Additional supplies:

Glue bottle (x1)	Screws (x50)
------------------	--------------



Step 1:

Start with the Back (B) piece, dowels facing up. The horizontal supports (D) are attached to the top corners and middle dowel. The feet (C) are attached to the lower corner dowels.

Be sure to glue the dowels to the holes for each piece assembled to create a secure fit.




Step 2:

The door piece (A) is then lined up to the dowels and connected into place aligning with the holes. The locks (vary in style) are on the bottom. (which is also the same side as the feet.)



Step 3:

The front lip (G) gets attached to the front of the feet (C) with the overhang towards the inside of the cage.

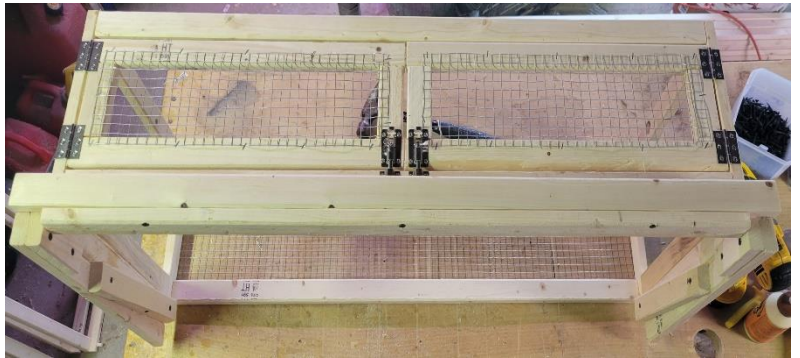


Step 4:

Slide the floor wire into place on top of the feet guides. **Be sure the top wire is going from front to back and the lower wire is going side to side to ensure egg rollout.** The wire will get attached to the bottom



side of the back and on top of the overhang lip. We recommend getting the wire lined up then stapling the front, pulling tight, first, then work one side all the way to the back. When stapling the other side to the guides be sure to pull tight. Then flip the cage upside down and pull the wire tight as it gets stapled to the bottom of the back.

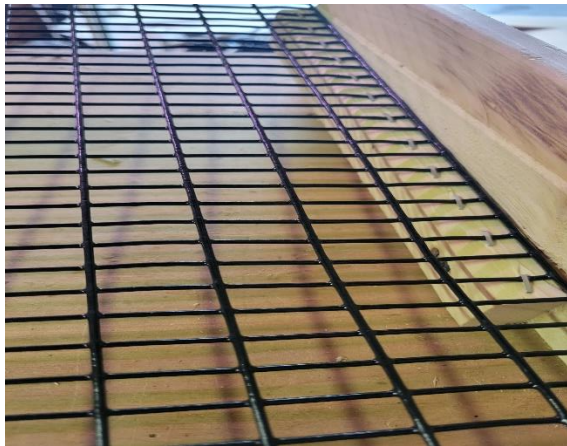

Step 5:

Staple the sides (J) and top (K) into place. One tier is now complete.

NOTE

There may be extra wire hanging over. This can be bent down or cut off.

Step 6:

Use supplied screws to attach the back legs (E) and the front legs (F) making sure the dowel holes are facing out for all 4.. The cage should rest on top of the inside brace. The tier supports (H) will get attached to the top of the cage as well with the screws provided.



All holes are predrilled.

Step 7:

Attach leg supports (I) to the front and back legs with the dowel and glue. Then screw bottom tray supports (M) into the leg supports (I).



Repeat steps 1 through 6 for the next tier.

Repeat steps 1-5 for the top tier. Your kit should look like this when complete.

***Please allow glue to set for 24 hrs before putting to use. If you have any questions or issues do not hesitate to reach out to us anytime. If you purchased the feeder/waterer kit and need assistance getting them setup, please contact us.**

Thank you for choosing our kits! We value and appreciate any and all feedback.

